

The following procedure is recommended to achieve high-quality final appearance :


If contained in the kit, carefully clean and degrease the PUR items. To apply their colour finish by spraying or coating, use enamels for plastic kits. If water-type decals are contained in the model kit, cut out respective stencils, insert into lukewarm water and, when the stencils may be moved on their paper base, apply to a respective place. Remove excess water with soft cloth.

If the model kit contains photo etched parts, cut them out and form them carefully, following instructions, and cement them, applying acrylic cement.


We recommend you to provide information and warning labels with a two-sided adhesive tape, to cut them carefully out, black their edges and stick to their respective place.

Following the instructions for their positioning, insert particular instruments from the rear side of the panel. After having the instruments carefully aligned, cement them with cement for plastic materials. Instruments not containing bezels are to be aligned with the surface of the instrument panel (see Fig. 1), Layout type A.




Some instruments contain bezels (especially German and US World War II ...instruments, etc.). If this is the case, insert such instrument into the panel from its rear side as deep as allowed by the collar on the instrument's rear side, which allows you to fit the bezel to the instrument from its front side (see Fig. 3), Layout type B.





Focke Wulf FW 190A-5

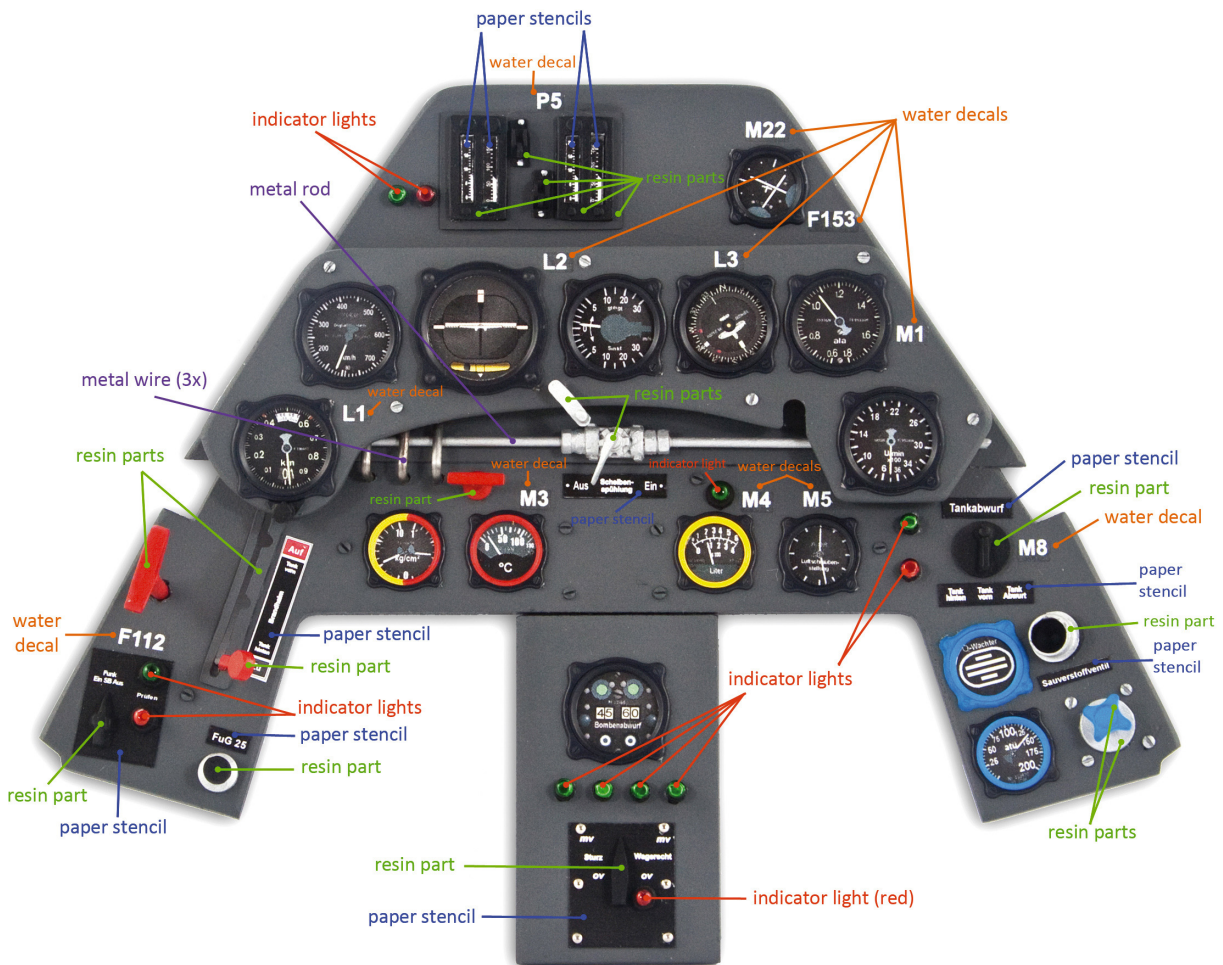



Focke Wulf FW 190A-5

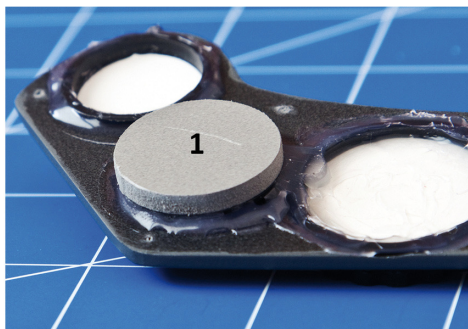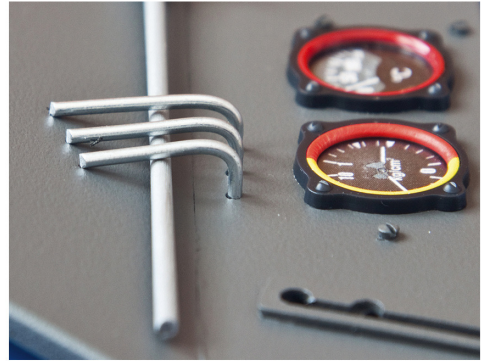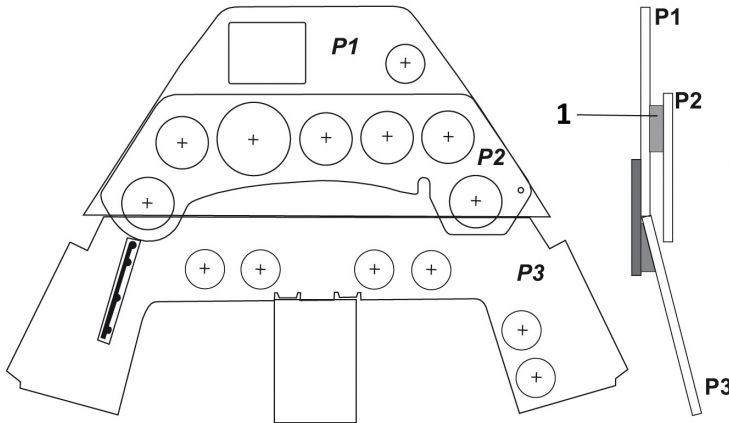

1) Glue a spacing ring to the rear side of the instrument. Secure the joint, applying a fluxing stick.

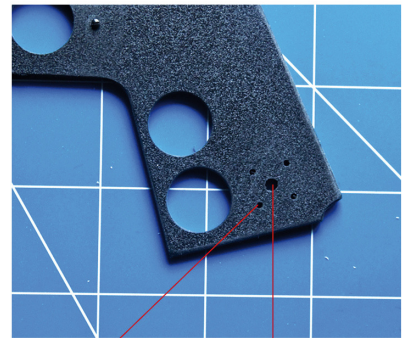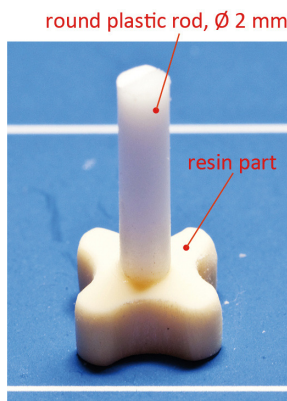

1.6 mm 2.1 mm
Drill a hole.

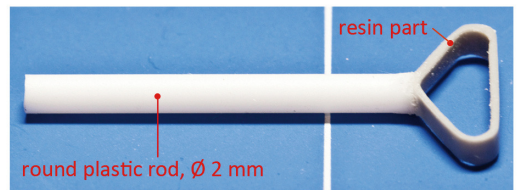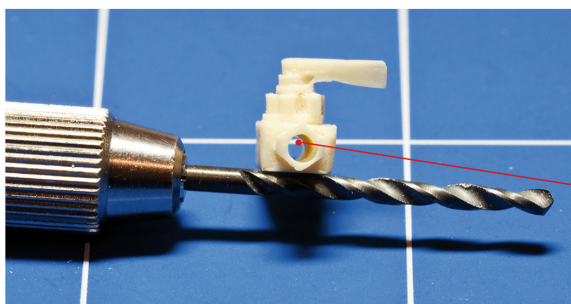

Ø 2.1 mm
Drill a hole

Instrument panel colour: RLM 66.

For more photos and information for construction purposes, please, visit our web site www.aerocockpit.com.

